

Factory Service

Powershred® 60Cs The World's Toughest Shredders®



CUSTOMER SERVICE & SUPPORT

www.fellowes.com

United States: 1-800-955-0959 Canada: 1-800-665-4339 Mexico: 001-800-514-9057





PLEASE READ THESE INSTRUCTIONS BEFORE USE.

DO NOT DISCARD: KEEP FOR FUTURE REFERENCE.



ENGLISH Model 60Cs

KEY

- A. Shredder head
- E. Bin B. Paper/credit card entry F. Disconnect power switch
- C. SafeSense® Technology
- D. Window
- O 1. 0FF
- 1 2. ON G. See safety instructions
- H. Control switch and LEDs
- O 2.0FF
- □ 3. Reverse 4. Overheat (red)
- 5. SafeSense® (yellow)

CAPABILITIES

Will shred: Paper, plastic credit cards, small paper clips and staples

Will not shred: Continuous forms, CD/DVDs, adhesive labels, transparencies, newspaper, cardboard, large paper clips, laminates, file folders, X-rays or plastic other than noted above

Paper shred size:

Cross-Cut.. ..5/32 in. x 2 in. (4mm x 50mm)

Maximum:

 
Sheets per pass Cards per pass. Paper entry width. ...9 in. (230mm)

*8.5 in. x11 in., 20lb., (75g) paper at 120V/60 Hz, 3.5Amps; heavier paper, humidity or other than rated voltage may reduce capacity. Maximum recommended daily usage rates: 100 sheets; 5 credit cards. (2) 10 sheets per pass.

 $\textbf{Fellowes SafeSense}^{\circledast} \, \textbf{shredders are designed to be operated in home and office environments ranging}$ between 50 - 80 degrees Fahrenheit (10 - 26 degrees Celsius) and 40 - 80% relative humidity.

 
▲ WARNING: IMPORTANT SAFETY INSTRUCTIONS — Read Before Using





 












SHREDDER. Vapors from propellants and petroleum based lubricants may



• Do not use if damaged or defective. Do not disassemble shredder. Do not place near or over heat source or water.

combust causing serious injury.

- This shredder has a Disconnect Power Switch (F) that must be in the ON (I) position to operate shredder. In case of emergency, move switch to OFF (0) position. This action will stop shredder immediately.
- Avoid touching exposed cutting blades under shredder head.
- Shredder must be plugged into a properly grounded wall outlet or socket of the voltage and amperage designated on the label. The grounded outlet or socket must be installed near the equipment and easily accessible. Energy converters, transformers, or extension cords should not be used with this product.
- FIRE HAZARD Do NOT shred greeting cards with sound chips or batteries.
- For indoor use only.
- Unplug shredder before cleaning or servicing.

BASIC SHREDDING OPERATION



Continuous operation:

Up to 6 minute maximum

NOTE: Shredder runs briefly after each pass to clear entry. Continuous operation beyond 6-minutes will trigger 20-minute cool down period.

PAPER/CARD



Plug in and put

disconnect power switch in ON (I) position

KM 0 Þ



Set to Auto-On (▷)





Feed paper/card entry and release



When finished shredding set to OFF (O)

ADVANCED PRODUCT FEATURES



 
SAFESENSE SAFESENSE® TECHNOLOGY

TECHNOLOGY® Stops shredding immediately when hands touch the paper opening.


SET-UP AND TESTING



Set to Auto-On (▷) to activate SafeSense®



 
Touch test area and look for the SafeSense® indicator to illuminate



SafeSense® is active and working properly

BASIC PRODUCT MAINTENANCE

 OILING SHREDDER 🚄





Set to OFF (O)



*Apply oil across entry

FOLLOW OILING PROCEDURE BELOW AND REPEAT TWICE



Set to Reverse (⋈) for 2-3 seconds



vour waste bin.

ACAUTION *Only use a non-aerosol vegetable oil in long nozzle container such as Fellowes 35250



TROUBLESHOOTING

 


Overheat Indicator: When the Overheat Indicator is illuminated, the shredder has exceeded its maximum operating temperature and needs to cool down. This indicator will remain illuminated and the shredder will not operate for the duration of the recovery time. See Basic Shredding Operation for more information about the continuous operation and recovery time for this shredder.



SafeSense® Indicator: If hands are too close to the paper entry, the SafeSense® indicator will illuminate and the shredder will stop shredding.

PAPER JAM



Set to Reverse (⋈)











Set to OFF (O) and unplug

Gently pull uncut paper Set to Auto-On (▷) from paper entry. Plug in.

and resume shredding

LIMITED PRODUCT WARRANTY

Limited Warranty: Fellowes, Inc. ("Fellowes") warrants the parts of the machine to be free of defects provide parts or services outside of the country where the shredder is initially sold by an authorized operation using an improper power supply (other than listed on the label), or unauthorized repair. please contact us or your dealer. Fellowes reserves the right to charge the consumers for any additional costs incurred by Fellowes to

Alternate slowly back and forth

in material and workmanship and provides service and support for 1 year from the date of purchase reseller. ANY IMPLIED WARRANTY, INCLUDING THAT OF MERCHANTABILITY OR FITNESS FOR A by the original consumer. Fellowes warrants the cutting blades of the machine to be free from PARTICULAR PURPOSE, IS HEREBY LIMITED IN DURATION TO THE APPROPRIATE WARRANTY PERIOD defects in material and workmanship for 1 year from the date of purchase by the original consumer. SET FORTH ABOVE. In no event shall Fellowes be liable for any consequential or incidental damages If any part is found to be defective during the warranty period, your sole and exclusive remedy will attributable to this product. This warranty gives you specific legal rights. The duration, terms, and be repair or replacement, at Fellowes' option and expense, of the defective part. This warranty does conditions of this warranty are valid worldwide, except where different limitations, restrictions, or not apply in cases of abuse, mishandling, failure to comply with product usage standards, shredder conditions may be required by local law. For more details or to obtain service under this warranty,