

POWERSHRED® 73Ci THE WORLD'S TOUGHEST SHREDDERS™



POWERSHRED® 73Ci THE WORLD'S TOUGHEST SHREDDERS™

Factory Service

Questions or Concerns?

www.fellowes.com

Troubleshooting

Registration

Manuals

Customer Service & Support

✓ Troubleshooting

Replacement parts

General questions

Canada Mexico +1-800-665-4339 +001-800-514-9057

United States

+1-800-955-0959

www.fellowes.com





6. SafeSense® indicator (yellow)





KEY

- A. See safety instructions
- B. Paper entry
- C. SafeSense® Technology
- D. Pullout bin F Casters
- F. Disconnect power switch
- O 1. 0FF I 2. ON
- G. Control Panel and LEDs
- 1. Reverse (blue)
- (blue) 2. ON/OFF (blue) 1. Remove Paper (red) 3. Forward (blue) 8. Overheat (red)
- 4. Bin full (red)
- 5. Bin open (red)



- Control panel features multi-touch back-lit controls
- When shredder is off, control panel will not be visible

CAPABILITIES

Will shred: Paper, credit cards, staples, small paper clips and CD/DVDs

Will not shred: Adhesive labels, continous form paper, transparencies, newspaper, cardboard, large paper clips, laminates, file folders, X-rays or plastic other than noted

Paper shred size:

Cross-Cut. .5/32 in. x 1-1/2 in. (4mm x 38mm)



 
*8.5"x11", 20lb., (75g) paper at 120V, 60 Hz, 4Amps; heavier paper, humidity or other than rated voltage may reduce capacity. Recommended daily usage rates: 300 sheets, 25 credit cards; 10 CD/DVDs (1) 12 sheets per pass.

 
Fellowes SafeSense® shredders are designed to be operated in home and office environments ranging between 50 - 80 degrees Fahrenheit (10 - 26 degrees Celsius) and 40 - 80% relative humidity.

 
▲ WARNING: IMPORTANT SAFETY INSTRUCTIONS — Read Before Using!











- Never use aerosol products, petroleum based lubricants or other flammable products on or near shredder. Do not use canned air on shredder.
- Do not use if damaged or defective. Do not disassemble shredder. Do not place near or over heat source or water.

- This shredder has a Disconnect Power Switch (F) that must be in the ON (I) position to operate shredder. In case of emergency, move switch to OFF (0) position. This action will stop shredder immediately.
- Avoid touching exposed cutting blades under shredder head.
- Shredder must be plugged into a properly grounded wall outlet or socket of the voltage and amperage designated on the label. The grounded outlet or socket must be installed near the equipment and easily accessible. Energy converters, transformers, or extension cords should not be used with this product.
- FIRE HAZARD Do NOT shred greeting cards with sound chips or batteries.
- For indoor use only.
- Unplug shredder before cleaning or servicing.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

BASIC SET UP

CASTER INSTALLATION











BASIC SHREDDING OPERATION



Continuous operation: 10-minute maximum

NOTE: Shredder runs briefly after each pass to clear entry. Continuous operation beyond 10-minutes will trigger 20-minute cool down period.

PAPER OR CD/CARD



Plug in and put disconnect power switch in ON (I) position



activate (blue)

Press (也)0N to Feed paper straight into paper entry and release



Hold CD/card at edge. feed right side of entry



When finished shredding set to OFF (U)

ADVANCED PRODUCT FEATURES



Jam Proof System

Eliminates paper jams and powers through tough jobs.



Patented SafeSense® Technology Stops shredding immediately when hands touch the paper opening




Energy Saving System 100% of the time — in use and out of use.



100% JAM PROOF SYSTEM OPERATION*

Eliminates paper jams and powers through tough jobs.

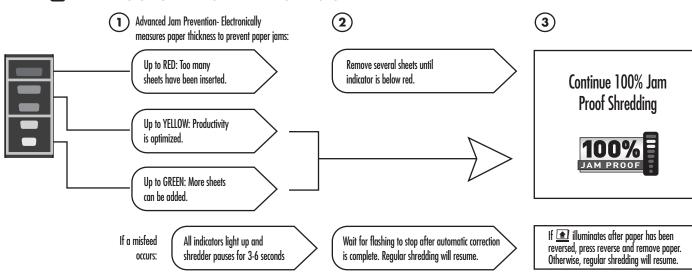

*100% Jam Proof when used in accordance with user manual



SAFE SAFESENSE® TECHNOLOGY

Stops shredding immediately when hands touch the paper opening.





Turn the shredder ON (U) to activate SafeSense®



indicator to illuminate

Touch test area and look for the SafeSense®



SafeSense® is active and working properly



ENERGY SAVING SYSTEM

Optimal energy efficiency 100% of the time - in use and out of use.

- Saves energy in four ways: energy-efficient electronics, jam prevention, standby mode and sleep mode.
- Sleep Mode shuts down shredder after 2 minutes of inactivity.

WHEN IN SLEEP MODE



In sleep mode





To get out of sleep mode touch control panel

insert paper

For more information about all of Fellowes Advanced Product Features go to www.fellowes.com

ENGLISH Model 73Ci

PRODUCT MAINTENANCE

OILING SHREDDER 🚄



All cross-cut shredders require oil for peak performance. If not oiled, a machine may experience diminished sheet capacity, intrusive noise when shredding, and could ultimately stop running. To avoid these problems, we recommend you oil your shredder each time you empty your waste bin.

 
FOLLOW OILING PROCEDURE BELOW AND REPEAT TWICE



(I)

*Apply oil across entry Press and hold forward (▶) 2-3 seconds

nozzle container such as Fellowes 35250



CLEANING AUTO-START INFRARED SENSORS

Paper detection sensors are designed for maintenance free operation. However, on rare occasions the sensors may become blocked by paper dust causing the motor to run even if there is no paper present. (Note: two paper detection sensors are located in the center of the paper entry).

TO CLEAN THE SENSORS



Turn off and unplug shredder



infared sensor

 


Dip cotton swab in rubbing alcohol

Using cotton swab, wipe away any contamination from the paper sensors

Go to Support Section at www.fellowes.com or see back page of manual for useful telephone numbers.

TROUBLESHOOTING





Bin Open: The shredder will not run if the bin is open. When illuminated, close the bin to resume shredding.



Bin Full: When illuminated, the shredder waste bin is full and needs to be emptied. Use Fellowes waste bag 36052.



Remove Paper: When illuminated, press reverse () and remove paper. Reduce paper quantity to an acceptable amount and refeed into paper entry.



SafeSense® Indicator: If hands are too close to the paper entry, the SafeSense® indicator will illuminate and the shredder will stop shredding. If SafeSense® is active for 3 seconds, the shredder will automatically turn off and the user must press the power button on the control panel to resume shredding.

LIMITED PRODUCT WARRANTY

mishandling, failure to comply with product usage standards, shredder operation using an improper power warranty, please contact us or your dealer. supply (other than listed on the label), or unauthorized repair. Fellowes reserves the right to charge the consumers for any additional costs incurred by Fellowes to provide parts or services outside of the country

Limited Warranty: Fellowes, Inc. ("Fellowes") warrants the parts of the machine to be free of defects in where the shredder is initially sold by an authorized reseller, ANY IMPLIED WARRANTY, INCLUDING THAT material and workmanship and provides service and support for 1 year from the date of purchase by the OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS HEREBY LIMITED IN DURATION TO original consumer. Fellowes warrants the cutting blades of the machine to be free from defects in material THE APPROPRIATE WARRANTY PERIOD SET FORTH ABOVE. In no event shall Fellowes be liable for any and workmanship for 1 year from the date of purchase by the original consumer. If any part is found to consequential or incidental damages attributable to this product. This warranty gives you specific legal rights. be defective during the warranty period, your sole and exclusive remedy will be repair or replacement, The duration, terms, and conditions of this warranty are valid worldwide, except where different limitations, at Fellowes' option and expense, of the defective part. This warranty does not apply in cases of abuse, restrictions, or conditions may be required by local law. For more details or to obtain service under this

3

4