


A4 sign holder usage guidelines

- 1 Remove cap from Skipper™ unit by twisting the top cap anti-clockwise.
- 2 Once the cap has been removed, screw the base of the plastic frame into the new cap (with hole in it). Tighten up with a Phillips head screwdriver.

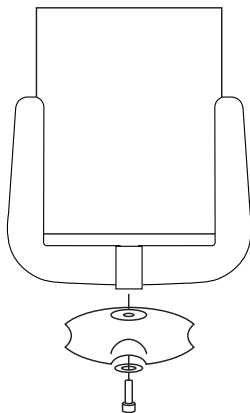

- 3 Insert A4 signage (not supplied) into plexiglass holder.
- 4 Slide the plexiglass holder into the frame.
- 5 Position the cap (with frame) onto the Skipper™ unit and twist clockwise until the cap lines up with the unit.



Made in the United Kingdom

Web: www.skippertm.co.uk

Tel: +44 (0) 844 412 7757

Fax: +44 (0) 844 412 7758

Email: sales@skippertm.co.uk

Skipper™

The total safety management solution