



DISHWASHER TABLETS
**POWER
ALL IN ONE**

FOR EVERYDAY CLEAN & SHINE



Finish Power the All in One Solution for your dishes. Our Powerball supercharges the tablet for everyday clean and shine 1st time, every time



- 
Save water
No pre-rinse
- 
Clean dish
- 
Shiny glass
- 
Eco cycle
- 
1st time tough
stain removal
- 
Glass protect
- 
Protects silverware
- 
Protects dish decor

								
	✓	✓	✓	✓	✓	✓	✓	✓
	✓	✓	✓	✓	✓	✓	✓	✓
	✓	✓	✓	✓	✓	✓	✓	✓

DESIGNED FOR

All Dishwashers
Perfect for Office Kitchenettes



INGREDIENTS

5-15% Oxygen-based Bleaching Agents, Phosphonates, <5% Polycarboxylates, Non-ionic Surfactants, Enzymes (Subtilisin, Amylase), Perfumes

DOSAGE | 1 tab per wash

INFORMATION

Tab Count	Regular SKU Code	Lemon SKU Code
30	3184335	•
46	3184388	3204694
60	3079356	3204680
63	•	3204692
75	3184393	3205223
80	3040878	3204762
81	3205212	3205211
84	3205602	3205210
90	3184253	3184252
110	3205209	•

COMPLETE YOUR DISHWASHING EXPERIENCE

- 1.** 
RINSE AID
 For drying & spot prevention.
- 2.** 
DEEP CLEANER
 Hygienically cleans grease & limescale.
- 3.** 
SALT
 Protection from limescale residue.
- 4.** 
CARE TABS
 Degreasing & cleaning boost.
- 5.** 
PROTECTOR
 Protection from glass corrosion.

Causes serious eye irritation. Keep out of reach of children. IF IN EYES: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing. If eye irritation persists: get medical attention. If medical advice is needed, have product container or label at hand. Do not ingest. If product is ingested then seek medical advice.