

# Technical specs

## SPIDERMASKP2 - SPIDER MASK FFP2 (M1200SM)

### Name:


BOX OF 1 REUSABLE SHELL + 20 FFP2 SPARE DISPOSABLE FILTERS - VALVE

### Size:

Single

### Colour:

Blue

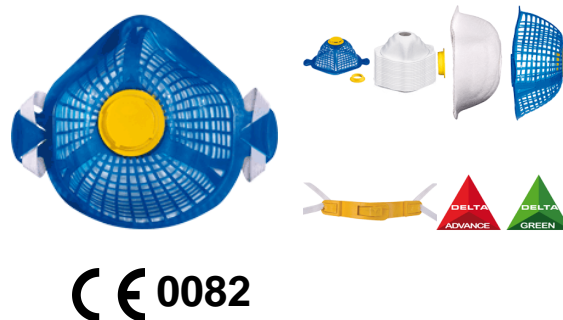

### Description :

Reusable FFP2 dust mask. Reusable moulded mask shell in TPE shell. Replaceable non woven synthetic fibre disposable filter. Innovative system that reduces cost and optimizes comfort. High performance exhalation valve that serves to change the filter layer like a screw. Adjustable straps. Back fixing with clip. Sold by 1 box of 1 reusable moulded mask shell + 20 FFP2 spare disposable filters.

### Materials:

Non woven,  
Moulded mask in TPE

### Strong points:

High performance exhalation valve.  
Screw to change the filtering masks.  
Back fastening with clip.

### Instructions for use:

This mask is classified in accordance with its filtering capacity and maximum total inward leakage. The filtering piece must be chosen according to the type of contaminant, its concentration (see material data safety sheet) and the protection factors allocated by national laws. For more information, consult standard EN529 (Recommendations for selection, use, servicing and maintenance).

FFP2: Protective mask against solid and liquid particles of average toxicity. Can be used for concentrations up to 10 X of the Average Exposure Value (AEV).

\*NR : Filter half-mask against particles not to be used for more than single shift.

Filtering capacity of the filter: 94%. Toward Inward Leak < 8%.

- Nominal protection factor (NPF):12.5

Examples of applications: Sanding of soft wood, composite materials, rust, putty, plaster, plastics / cutting, deburring, grinding, drilling of metal.

1. Hold the preformed mask in the palm of your hand, with the nose bar towards the top and the straps hanging down.
2. Place the mask under your chin, covering your mouth and nose.
3. Take the fixing device on which the elastic straps are linked, pass it around the back of your head. Fasten the fixing device through snap.
4. Adjust the mask onto your face.
5. Check the seal by breathing out hard and ensure that no air leaks around the sides of the mask(block the exhalation valve to do the checking). If necessary, readjust and check again.

The filtering piece should not be used for more than single shift. The filtering piece must only be used once (no maintenance). Only take the filtering piece out of its packaging just before you are going to use it. Only use when the concentration of contaminants does not pose an immediate risk to life or health, and only in accordance with local applicable health and safety standards. Before you use the mask, check that it is undamaged, that its expiry date has not been reached (see the box) and that the protection class (FFP2 / FFP3) is appropriate for the product used and its concentration.

### Limits to use:



**DELTA PLUS GROUP**

La Peyrolière - B.P. 140 - 84405 APT Cedex - France  
www.deltaplus.fr



UPDATE : 26/03/2012

# Technical specs

## **SPIDERMASKP2** - SPIDER MASK FFP2 (M1200SM)

Do not use other than for the scope of use defined in the above instructions for use. Contact with the skin may cause allergic reactions in people with sensitive skin. In this event, leave the area of risk, remove the mask and seek medical advice.

- The user must have adequate training in the wearing of the mask and must have read the instructions before using it.
- Use the mask in well-ventilated areas, where there is no lack of oxygen (>19.5%) and where there is no explosive atmosphere. Do not use when the nature and/or the concentration of the contaminant is unknown.
- The mask must be positioned correctly in order to provide the expected level of protection. Do not use if facial hair (beard, sideburns) prevents the mask from being fully sealed, and leakage is detected.
- Leave the area immediately if you experience breathing problems and/or dizziness or faintness.
- Do not make any modifications to the mask, and discard it if there is any damage to it.
- This dust mask DOES NOT PROTECT the user against gases or vapours and solvents from spray painting.
- Failure to observe these instructions for use may have adverse effects on the health of the user and expose him to serious or even life-threatening risks. This dust filtering piece shall not be used for more than one shift.

### **Instructions for storage:**

Store in a cool, dry place away from frost and light in their original packaging (+2°C/+55°C - HR<75%).

### **Instructions for cleaning / maintenance:**

This mask must only be used once (no maintenance).

### **Performances :**

This mask complies with the European directive 89/686, notably regarding ergonomics, innocuousness, comfort, ventilation and flexibility, and with EN149:2001+A1:2009 type FFP2 \*NR standard (nominal protective factor: 10 X AEV (Average Exposure Value)).



**DELTA PLUS GROUP**

La Peyrolière - B.P. 140 - 84405 APT Cedex - France  
[www.deltaplus.fr](http://www.deltaplus.fr)



UPDATE : 26/03/2012